HOT OIL INJECTION



OSI Tool




Traditional Tool \neg





- Hot oil where needed
- Less oil volume required
- Less heat loss

- Higher cost
- Longer injection time
- More volume injected
- More heat loss

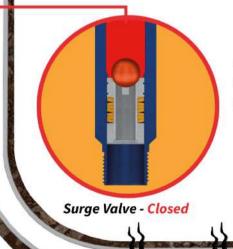

The Surge Valve keeps the hot oil inside the tool by closing the valve, thus saving time, money, and increasing the treatment efficiency.

The traditional hot oil injection method is inefficient as it becomes time-consuming and costly.